

	Computer Sports Medicine, Inc.			
	Title:	Setting up a HUMAC Computer		
	Document #:	300033		
	Rev:	B	Effective Date:	12/13/05
	DCO #:	314		
	Page 1 of 4			

1.0 Purpose

1.1 To define the steps for setting up a computer for use with the HUMAC System.

2.0 Scope

2.1 This procedure documents the steps required to setup a computer for use with the HUMAC System.

3.0 Definitions

3.1

4.0 Responsibility

4.1 It is the responsibility of Production to follow this procedure when setting-up the computer for use with the HUMAC.

5.0 Procedure

5.1 Record Serial Numbers

5.1.1 Record the Computer Service Tag Number and Printer Serial Number on the HUMAC Order Routing sheet.

5.2 Initial Power-up and Registration

5.2.1 Plug-in and power-up the computer.

5.2.2 Accept DELL EULA.

5.2.3 Accept the country options (typically US) for the end user.

5.2.4 Set time-zone to the end user location.

5.2.5 Accept MS EULA.

5.2.6 Accept default Computer Name.

5.2.7 Connect to Internet through Local Area Network.

5.2.8 Enter "**HUMAC User**" for the User Name.

5.2.9 Click **Finish** to complete the registration.

- 5.3 Set the BIOS Options
 - 5.3.1 Re-boot the computer.
 - 5.3.2 During startup press the **F2** key to enter SETUP mode.
 - 5.3.3 Scroll to Power Management and press the **Enter** key.
 - 5.3.4 Change AC Power Recovery to On.
 - 5.3.5 Press the **Esc** key and select **Save Changes and Exit**.
- 5.4 Loading Windows Updates
 - 5.4.1 Select **Start, All Programs, Windows Update**.
 - 5.4.2 Follow the **Express Install** instructions to install Windows Updates.
 - 5.4.3 If it appears, select the options to “**Stay Current With Automatic Updates**”.
- 5.5 Loading Office Updates
 - 5.5.1 From the Windows Update screen, click the **Office Update** link.
 - 5.5.2 Follow the instructions to install all Office updates.
- 5.6 Other Updates
 - 5.6.1 If the computer asks to load other updates, e.g. Java, select Yes and install the updates.
- 5.7 Disable USB Power-Down – HUMAC NORM & 6000 Systems only.
 - 5.7.1 Follow the instructions on document *300025 Disabling USB Power-Down Under Windows XP*.
- 5.8 Set Printer Margins
 - 5.8.1 Set the Printer Margins follow the instructions on document *300027 Setting the HUMAC Printer Margins*.
- 5.9 Install Acrobat
 - 5.9.1 If Acrobat is pre-installed on the customer’s computer, skip to Step 5.10 Set IE Home Page to csmisolutions
 - 5.9.2 Go to www.adobe.com and install Acrobat Reader.

- 5.9.3 Do not install the Photo software. Do not use the Download Manager.
- 5.9.4 When the download begins, select Open to run the program.
- 5.10 Set IE Home Page to csmisolutions
 - 5.10.1 Start Internet Explorer.
 - 5.10.2 Go to www.csmisolutions.com.
 - 5.10.3 From the **Tools** menu, select **Internet Options**.
 - 5.10.4 In the **Home Page** area, click the **Use Current** button.
 - 5.10.5 Click the **OK** button to close the Options dialog box.
- 5.11 Install Printer Drivers
 - 5.11.1 Install the printer drivers. Do not connect or power-up the printer. If the software says **Searching for Printer**, click the **Stop Searching** button.
 - 5.11.2 After the drivers are installed the software will start the registration screen. Click the **Remind me in two weeks** button.
- 5.12 Install Application Software
 - 5.12.1 Install the HUMAC program following document *300029 HUMAC Software Installation Instructions for WinXP*.
 - 5.12.2 Start the HUMAC program and register the software following document *300026 Registering the HUMAC Program*.
 - 5.12.3 Install the PhysioVideo Exercise Browser program.
 - 5.12.4 Start the Exercise Browser and activate the program.
- 5.13 Sort the Start Menu
 - 5.13.1 From the **Desktop**, select **Start, All Programs**.
 - 5.13.2 Right-click the program list area.
 - 5.13.3 From the pop-up menu, select **Sort by Name**.
- 5.14 Arrange the Desktop icons
 - 5.14.1 Drag the **HUMAC** icon to the center of the desktop.

5.15 Install the HUMAC USB Drivers – HUMAC NORM & 6000 Systems only.

5.15.1 Power-down the HUMAC USB board.

5.15.2 Connect the HUMAC USB board to the PC and power-up the board.

5.15.3 Install the HUMAC USB Drivers following document *300029 HUMAC Software Installation Instructions for WinXP*.

6.0 Related Documents and/or Attachments

- 300025 Disabling USB Power-Down Under Windows XP.
- 300026 Registering the HUMAC Program.
- 300027 Setting the HUMAC Printer Margins.
- 300029 HUMAC Software Installation Instructions for WinXP.